




ID-RP1200VD

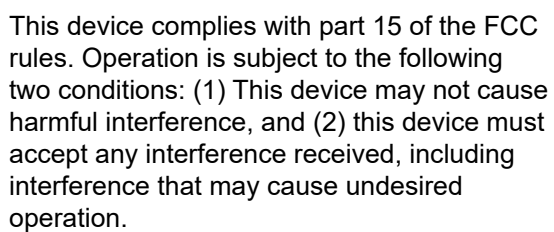

Thank you for choosing this Icom product. This product is designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

This product combines traditional analog technologies with the new digital technology, Digital Smart Technologies for Amateur Radio (D-STAR), for a balanced package.

■ Important

READ ALL INSTRUCTIONS carefully and completely before using the repeater.

SAVE THIS INSTRUCTION MANUAL— This instruction manual contains important safety and operating instructions for the repeater.

The Utility for ID-RP3 is required for programming the repeater. Ask your dealer for details of the utility.

■ Features

● RF Direct Sampling System (ID-RP2010V/ID-RP4010V)

The repeater employs an RF direct sampling system. RF signals are directly converted to digital data in the ADC, and then processed in the FPGA. This system is a leading technology, marking an epoch in amateur radio.

● DD Mode Operation (ID-RP1200VD)

The ID-RP1200VD works in either DV or DD mode (switchable). DD mode provides data communication and Internet access at 128 kbps.

● SD card slot

An SD card is usable for storing or writing setting data, updating firmware, and backing up or restoring the settings.

● Connecting to the ID-RP2C

Supports a connection to the ID-RP2C.

● Analog FM mode operation

Usable as an analog FM repeater.

■ Explicit definitions

WORD	DEFINITION
⚠ DANGER!	Personal death, serious injury or an explosion may occur.
⚠ WARNING!	Personal injury, fire hazard or electric shock may occur.
CAUTION	Equipment damage may occur.
NOTE	Recommended for optimum use. No risk of personal injury, fire or electric shock.

■ Voice coding technology

The AMBE+2™ voice coding Technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc. This voice coding Technology is licensed solely for use within this Communications Equipment.


The user of this Technology is explicitly prohibited from attempting to extract, remove, decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

U.S. Patent Nos.


#8,359,197 and #7,970,606.

■ Supplied accessories


Ethernet cable
(0.6 m, 2 feet)

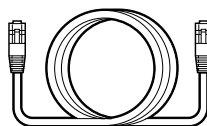


USB cable
(1 m, 3.2 feet)

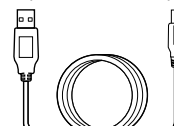

DC power cable
(3 m, 9.8 feet)




Spare fuse*



Spare fuse
(5 A)



Rubber feet

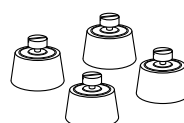

Allen wrench



*ID-RP2010V:

25 A fuses are supplied.

ID-RP4010V/ID-RP1200VD:

10 A fuses are supplied.

① Some accessories are not supplied, or the shape is different, depending on the repeater version.

■ FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this device, not expressly approved by Icom Inc., could void your authority to operate this device under FCC regulations.

◇ FCC SDoC

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party

Company Name: Icom America Inc.
Address: 12421 Willows Road NE, Kirkland,
WA 98034

U.S. Contact Information

800-USA-ICOM (800-872-4266)
Monday – Friday 7 AM to 5 PM PST



Cet équipement a été testé et reconnu conforme aux limites fixées pour un appareil numérique de classe B, conformément au point 15 de la réglementation FCC. Ces limites ont été fixées afin d'assurer une protection raisonnable contre les interférences nocives dans une installation résidentielle. Cet équipement génère, utilise et peut émettre un rayonnement de fréquence radio. S'il n'a pas été installé conformément aux instructions, il peut par ailleurs créer des interférences perturbant les communications radio. Toutefois, il n'y a aucune garantie que les interférences ne se produiront pas dans une installation particulière. Si cet équipement crée des interférences perturbant la réception de la radio ou de la télévision, comme cela peut être déterminé en éteignant et en allumant l'équipement, l'utilisateur est invité à essayer de corriger l'interférence en prenant une ou plusieurs des mesures ci-après:

- Réorienter ou changer de place l'antenne de réception.
- Éloigner l'équipement et le récepteur.
- Connecter l'équipement sur une prise sur un autre circuit que celui sur lequel le récepteur est connecté.
- Faire appel au revendeur ou à un technicien radio/TV expérimenté.

MISE EN GARDE: Tout changement ou modification, non expressément approuvé par Icom Inc, peut annuler l'autorisation de l'utilisateur à utiliser cet appareil conformément à la réglementation FCC.

Déclaration de conformité du fournisseur

Cet appareil est conforme à la partie 15 de la réglementation FCC. Son utilisation est soumise au respect de deux conditions : (1) Cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement non désiré.

Partie responsable

Nom de la société : Icom America Inc.
Adresse : 12421 Willows Road NE, Kirkland,
WA 98034

Coordonnées pour les États-Unis

800-USA-ICOM (800-872-4266)
Du lundi au vendredi,
de 7 h à 17 h, heure du Pacifique



■ Installation notes

The installation of this equipment should be made in such a manner as to respect the EC recommended electromagnetic field exposure limits. (1999/519/EC)

For the ID-RP2010V/ID-RP4010V:

The maximum RF power available from this device is 25 watts.

The antenna should be installed as high as possible for maximum efficiency and the installation height should be at least 1.3 meters above any accessible position.

In the case where an antenna cannot be installed at a reasonable height, then the transmitter should neither be continuously operated for long periods if any person is within a distance of 1.3 meters of the antenna, nor operated at all if any person is touching the antenna.

It is recommended that antenna of a maximum gain of 0 dBd is used.

If higher gain antenna is required then please contact your Icom distributor for revised installation recommendations.

For the ID-RP1200VD:

The maximum RF power available from this device is 10 watts.

The antenna should be installed as high as possible for maximum efficiency and the installation height should be at least 0.46 meters above any accessible position.

In the case where an antenna cannot be installed at a reasonable height, then the transmitter should neither be continuously operated for long periods if any person is within a distance of 0.46 meters of the antenna, nor operated at all if any person is touching the antenna.

It is recommended that antenna of a maximum gain of 0 dBd is used.

If higher gain antenna is required then please contact your Icom distributor for revised installation recommendations.

■ About CE and DOC



Hereby, Icom Inc. declares that the versions of ID-RP2010V/ID-RP4010V/ID-RP1200VD which have the “CE” symbol on the product, comply with the essential requirements of the Radio Equipment Directive, 2014/53/EU, and the restriction of the use of certain hazardous substances in electrical and electronic equipment Directive, 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://www.icomjapan.com/support/>

■ About UKCA DOC

To obtain the UKCA Declaration of Conformity, please contact Icom UK Limited by email at info@icomuk.co.uk or alternatively call + 44(0) 1227 741741.

■ Disposal



The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

■ Precautions

⚠ **DANGER HIGH RF VOLTAGE! NEVER** touch an antenna or antenna connector while transmitting. This could cause an electrical shock or burn.

⚠ **DANGER HIGH RF VOLTAGE! NEVER** install the antenna at any place that person easily touch the antenna while transmitting. This could cause an electrical shock or burn.

⚠ **WARNING! NEVER** apply AC power to the [DC13.8V] socket on the repeater rear panel. This could cause a fire or damage the repeater.

⚠ **WARNING! NEVER** apply more than 16 V DC to the [DC13.8V] socket on the repeater rear panel. This could cause a fire or damage the repeater.

⚠ **WARNING! NEVER** remove the fuse holder on the DC power cable. Excessive current caused by a short could cause a fire or damage the repeater.

⚠ **WARNING! NEVER** reverse the DC power cable polarity. This could cause a fire or damage the repeater.

⚠ **WARNING! NEVER** let metal, wire or other objects contact the inside of the repeater, or make incorrect contact with connectors on the rear panel. This could cause an electric shock or damage the repeater.

⚠ **WARNING! NEVER** operate or touch the repeater with wet hands. This could cause an electric shock or damage to the repeater.

⚠ **WARNING! NEVER** operate the repeater if you notice an abnormal odor, sound or smoke. Immediately turn OFF the power and/or remove the DC power cable. Contact your Icom dealer or distributor for advice.

⚠ **WARNING! NEVER** put the repeater on an unstable place where the repeater may suddenly move or fall. This could cause an injury or damage the repeater.

CAUTION: DO NOT expose the repeater to rain, snow or any liquids. They could damage the repeater.

CAUTION: DO NOT use or leave the repeater in areas with temperatures below -10°C ($+14^{\circ}\text{F}$) or above $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$). Be aware that temperatures can exceed 80°C ($+176^{\circ}\text{F}$), resulting in permanent damage to the repeater if left there for extended periods.

CAUTION: DO NOT place or leave the repeater in excessively dusty environments. This could damage the repeater.

CAUTION: DO NOT use harsh solvents such as benzine or alcohol when cleaning. This could damage the repeater surfaces. If the surface becomes dusty or dirty, wipe it clean with a soft, dry cloth.

CAUTION: DO NOT put anything on top of the repeater. This will obstruct heat dissipation.

BE CAREFUL! The repeater rear panel will become hot when continuously transmitting for long periods of time.

NEVER leave the repeater in an insecure place to avoid use by unauthorized persons.

Operate the repeater that complies with your local laws and regulations. Depending on countries and/or regions, repeater's output power and/or operations on specific frequencies may be restricted to avoid interferences with existing radio stations or services.

Icom is not responsible for the destruction, damage to, or performance of any Icom or non-Icom equipment, if the malfunction is because of:

- Force majeure, including, but not limited to, fires, earthquakes, storms, floods, lightning, or other natural disasters, disturbances, riots, war, or radioactive contamination.
- The use of Icom repeaters with any equipment that is not manufactured or approved by Icom.

Icom and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand and/or other countries.

AMBE+2 is a trademark and property of Digital Voice Systems Inc.

All other products or brands are registered trademarks or trademarks of their respective holders.

■ Précautions (pour le Canada)

⚠ **AVERTISSEMENT TENSION À HAUTES RF! NE JAMAIS** toucher l'antenne ou le connecteur de l'antenne pendant une transmission. Cela pourrait causer un choc électrique ou des brûlures.

⚠ **AVERTISSEMENT TENSION À HAUTES RF! NE JAMAIS** installer l'antenne à n'importe quel endroit où cette personne touche facilement l'antenne tout en transmettant. Cela pourrait causer un choc électrique ou des brûlures.

⚠ **AVERTISSEMENT! NE JAMAIS** raccorder de courant alternatif à la prise [DC13.8V] sur le panneau arrière de le répéteur. Cela pourrait causer un incendie ou endommager le répéteur.

⚠ **AVERTISSEMENT! NE JAMAIS** raccorder plus de 16 V CC à la prise [DC13.8V] sur le panneau arrière de le répéteur. Cela pourrait causer un incendie ou endommager le répéteur.

⚠ **AVERTISSEMENT! NE JAMAIS** retirer le porte-fusible du câble d'alimentation CC. Un courant excessif provoqué par un court-circuit pourrait causer un incendie ou endommager le répéteur.

⚠ **AVERTISSEMENT! NE JAMAIS** inverser la polarité du câble d'alimentation CC. Cela pourrait causer un incendie ou endommager le répéteur.

⚠ **AVERTISSEMENT! NE JAMAIS** laisser du métal, du fil ou d'autres objets entrer en contact avec l'intérieur du répéteur ou raccorder incorrectement les connecteurs sur le panneau arrière. Cela pourrait provoquer une électrocution ou endommager le répéteur.

⚠ **AVERTISSEMENT! NE JAMAIS** utiliser ou toucher le répéteur avec des mains mouillées. Cela pourrait causer un choc électrique ou endommager le répéteur.

⚠ **AVERTISSEMENT! NE JAMAIS** faire fonctionner le répéteur si vous détectez une odeur, un bruit ou une fumée anormaux. Mettre immédiatement l'appareil hors tension et/ou débrancher le câble d'alimentation CC. Contactez votre revendeur ou distributeur Icom pour obtenir des conseils.

⚠ **AVERTISSEMENT! NE JAMAIS** placer le répéteur sur un support instable où il risque de se déplacer brusquement ou de tomber. Cela pourrait causer des blessures ou endommager le répéteur.

MISE EN GARDE: NE JAMAIS exposer le répéteur à la pluie, à la neige ou à tout liquide. Cela pourrait endommager le répéteur.

MISE EN GARDE: NE PAS utiliser ou laisser le répéteur dans des zones avec des températures inférieures à -10°C ($+14^{\circ}\text{F}$) ou supérieures à $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$). Sachez que les températures peuvent dépasser $+80^{\circ}\text{C}$ ($+176^{\circ}\text{F}$), ce qui peut endommager définitivement le répéteur s'il est laissé là pendant de longues périodes.

MISE EN GARDE: NE PAS placer ou laisser le répéteur dans des environnements excessivement poussiéreux. Cela pourrait endommager le répéteur.

MISE EN GARDE: NE PAS utiliser de solvants agressifs tels que du Benzène ou de l'alcool lors du nettoyage. Cela risque d'endommager les surfaces de le répéteur. Si la surface devient poussiéreuse ou sale, la nettoyer avec un tissu doux et sec.

MISE EN GARDE: NE PAS mettre quoi que ce soit sur le dessus du répéteur. Cela obstruera la dissipation de la chaleur.

MISE EN GARDE: Le panneau arrière de répéteur chauffe en cas d'utilisation continue pendant une longue durée.

NE JAMAIS laisser le répéteur dans un endroit peu sûr pour éviter que des personnes non autorisées ne l'utilisent.


Utilisez répéteur conformément aux lois et réglementations locales. Selon les pays et/ou les régions, la puissance de sortie de répéteur et/ou les opérations sur des fréquences spécifiques peuvent être limitées pour éviter les interférences avec les stations ou services radio existants.

■ Table of contents

■ Important	i	6 INFORMATION	14
■ Features	i	■ Specifications	14
■ Explicit definitions	i	◇ General	14
■ Voice cording technology	i	◇ Transmitter	14
■ Supplied accessories	i	■ Connectors	15
■ FCC Information	ii	◇ [DC 13.8 V]	15
◇ FCC SDoC	ii	◇ [LAN 1]	15
■ Installation notes	iii	◇ [LAN 2]	15
■ About CE and DOC	iii	◇ [CONT I/O]	15
■ About UKCA DOC	iii	◇ Receiver	15
■ Disposal	iii	◇ [RPT1]/[RPT2]	16
■ Precautions	iv	◇ [REF IN 10MHz]	16
■ Précautions (pour le Canada)	v	◇ [USB]	16
1 SYSTEM OUTLINE	1	◇ [EXT-SP (SERVICE)]	16
■ System outline	1	◇ [TX ANT]	16
2 PANEL DESCRIPTION	2	◇ [RX ANT]	16
■ Front panel	2	■ Options	16
■ Rear panel	3	■ About the licences	16
3 INSTALLATION AND CONNECTION	5		
■ Select a location	5		
■ Connecting a power source	5		
■ Grounding	5		
■ Installing in a system rack	6		
■ Attaching the rubber feet	6		
■ Connecting the Utility software	7		
■ Using the [DV/DD] switch (For only the ID-RP1200VD)	7		
■ Connecting multiple repeaters	8		
■ Connecting to the ID-RP2C	8		
■ Operating as a Gateway	9		
◇ Using a Gateway server	9		
◇ System requirements	9		
4 SD CARD	10		
■ Using an SD card	10		
◇ Inserting	10		
◇ Removing	10		
■ About the SD card's folder contents	11		
5 MAINTENANCE	12		
■ Cleaning	12		
■ Replacing fuses	12		
◇ Replacing DC power cable fuses	12		
◇ Replacing the circuitry fuse	12		
■ About the firmware	13		
■ Detaching the rack handle	13		
■ Troubleshooting	13		

System outline

This repeater is used to build a network that connects distant repeaters through an LTE network*¹ or the Internet. Repeaters that do not have a gateway server can communicate with other repeaters by adding assist repeaters and controllers.

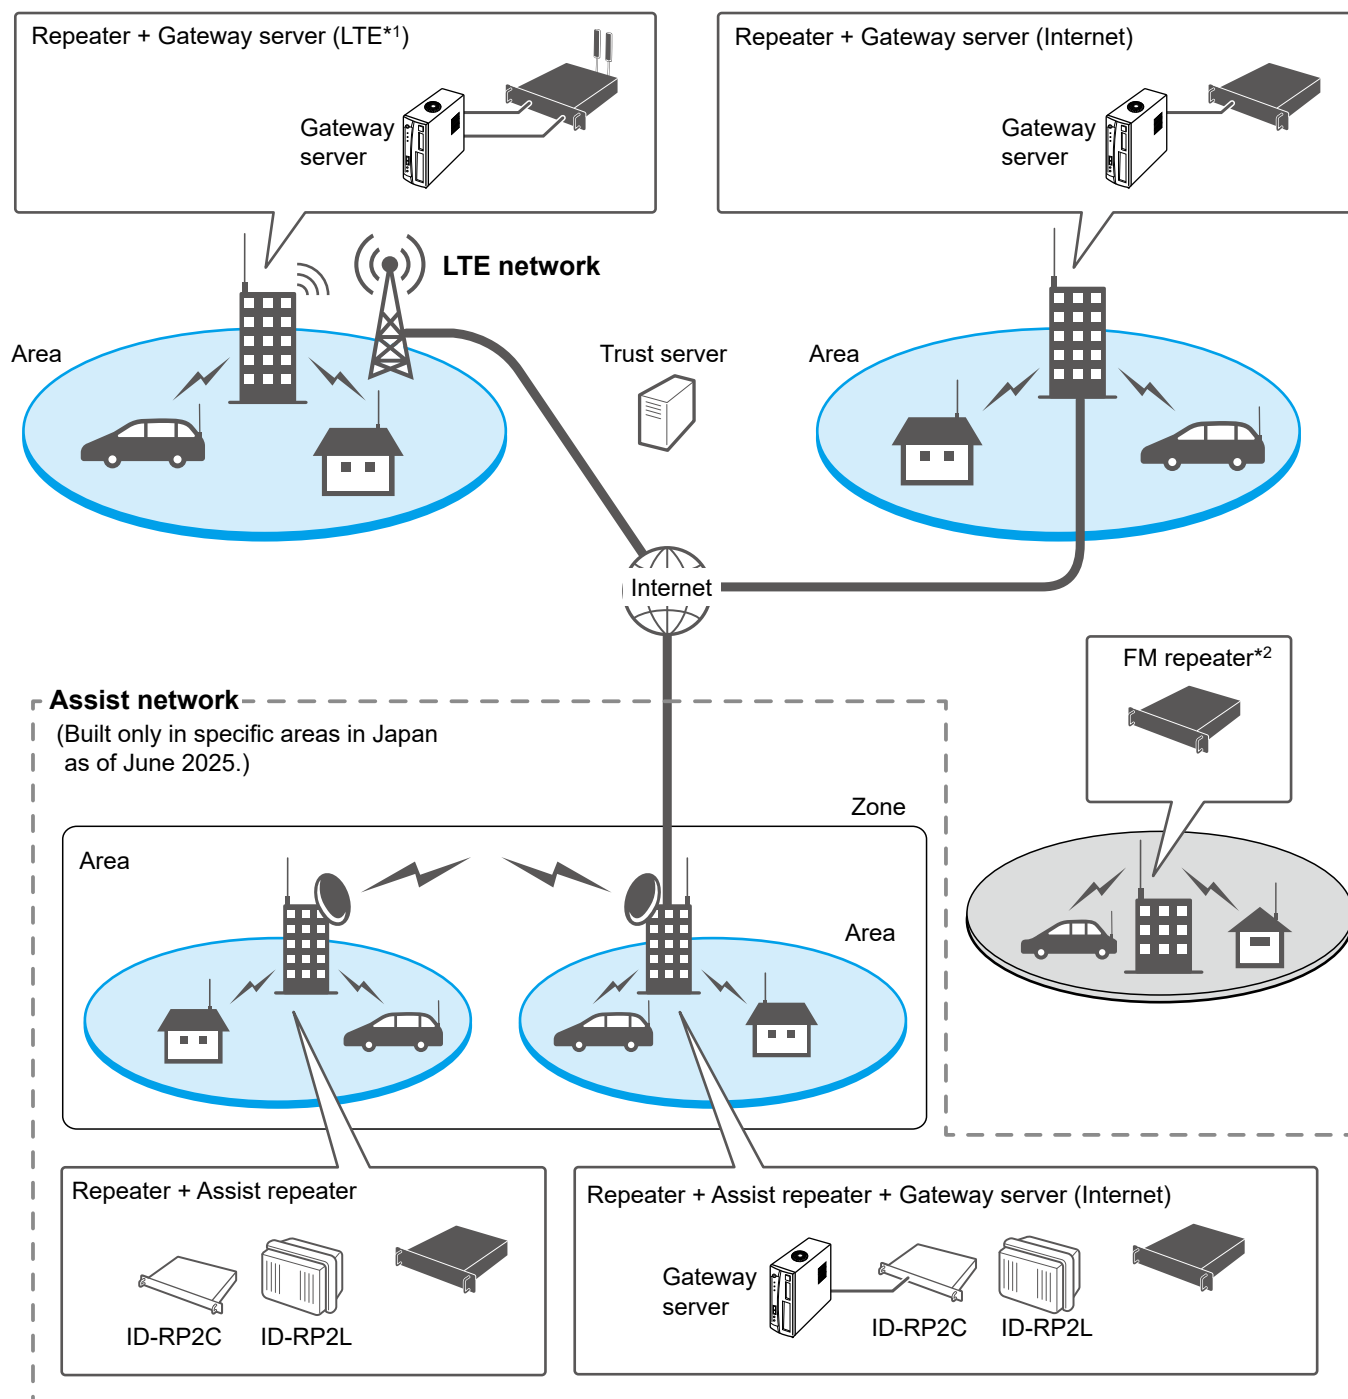


*¹ Operating the repeater on the LTE network requires following:

- An optional UX-262 LTE unit
- Connecting to a Gateway Server

*² The FM repeater function is not usable in combination with other repeater functions.

■ Front panel

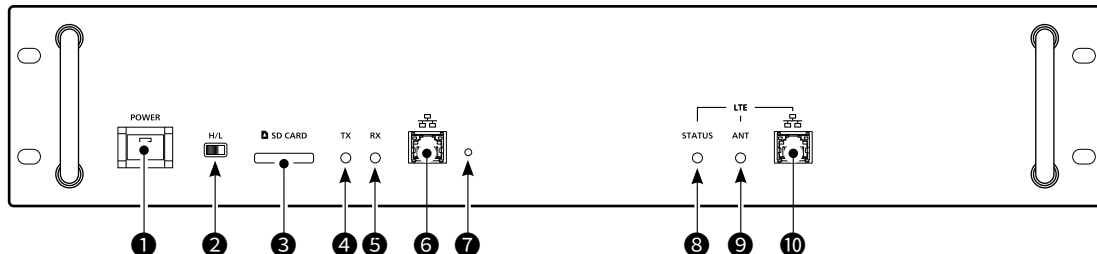

❶ POWER SWITCH [POWER]

- Push to turn the repeater ON.
① Lights green when the repeater is ON.
- Hold down to turn the repeater OFF.

❷ HIGH/LOW POWER SELECT SWITCH [H/L]

- Sets the output power to High (25 W) or Low (2.5 W). (ID-RP2010V/ID-RP4010V)
- Sets the output power to High (10 W) or Low (1.0 W). (ID-RP1200VD)

❸ SD CARD SLOT [SD CARD] (p. 10)

Accepts an SD card. Used for firmware updates, importing and exporting setting data and voice data.

❹ TRANSMIT INDICATOR [TX]

Lights red while transmitting.
① Blinks when an error has occurred.

❺ RECEIVE INDICATOR [RX]

Lights green while receiving.
① Blinks when the firmware is successfully updated.

NOTE: Both [TX] and [RX] blinks at the same time when the repeater is reset to the default value.

❻ ETHERNET CONNECTOR [LAN 1]

Connects to a Gateway server PC.
① If multiple repeaters are connected, and the ID-RP1200VD operating in DD mode is included, connect the gateway server to the ID-RP1200VD. The system does not work if it is connected to other repeaters.

❼ RESET SWITCH

The switch used for special operation such as resetting the repeater, and so on.

- ① Push using the tip of the pen.
- ① The switch is also used when updating the firmware.

❽ LTE STATUS [STATUS]*

Indicates the LTE status.

- ① About the LED indication
 - Lights while communicating.
 - Blinks while registering to an LTE network.
 - Slowly blinks when a communication failure occurs.
 - Does not light when SIM cards are not inserted, or the LTE connection setting is not applied.

❾ LTE ANTENNA INDICATOR [ANT]*

Indicates the relative receive signal strength level.

- ① About the LED indication
 - Lights when the signal strength is good.
 - Blinks when the signal strength is poor.
 - Does not light when out of service, or the repeater cannot connect to an LTE network.

❿ ETHERNET CONNECTOR [LAN 2]*


Connects to a Gateway server PC when operating in the LTE mode.

- ① If multiple repeaters are connected, and the ID-RP1200VD operating in DD mode is included, connect the gateway server to the ID-RP1200VD. The system does not work if it is connected to other repeaters.

*❽, ❾, and ❿ are used only when an optional LTE unit is installed.

■ Rear panel

ID-RP2010V/ID-RP4010V:

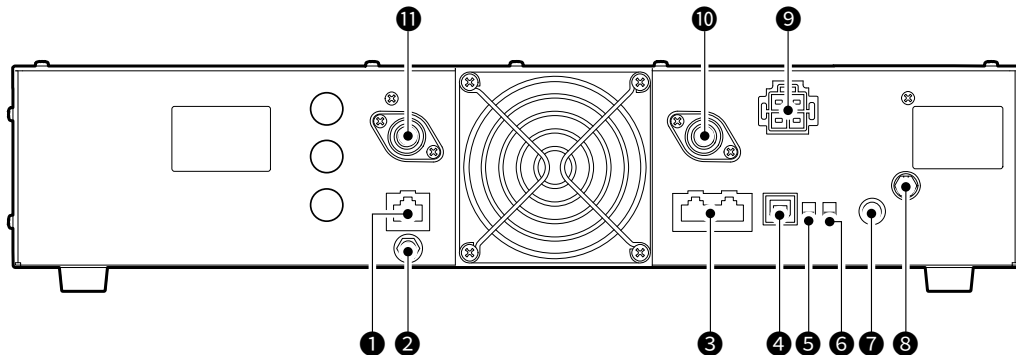

- ❶ CONT I/O PORT [CONT I/O]** (p. 15)
Connects to the ID-RP2C with the supplied control cable for serial data communications.
- ❷ REFERENCE SIGNAL INPUT CONNECTOR [REF IN 10 MHz]** (p. 16)
Inputs a 10 MHz reference signal for adjusting the reference signal.
- ❸ RPT1/RPT2 PORT [RPT1]/[RPT2]** (p. 16)
Connects to other repeaters with the supplied control cable for data communications, when additional repeater modules are installed in the local repeater.
- ❹ USB PORT [USB]** (p. 16)
Connects to a PC through a USB cable (A - B type) to program the repeater.
- ❺ CONT I/O RPT SWITCH [CONT I/O RPT]** (p. 8)
Select to use the [RPT1]/[RPT2] or [CONT I/O].
When using the ID-RP2C as gateway or assist controller, set to [CONT I/O].
① Turn the repeater OFF and then restart it to apply the change.
- ❻ DV/DD SELECT SWITCH [DV/DD]**
This switch on the ID-RP2010V/ID-RP4010V does not work.
- ❼ SERVICE JACK [SERVICE]** (p. 16)
Outputs the receive audio and DTMF tones.
- ❽ GROUND TERMINAL [GND]**
Connects to a ground to prevent electrical shocks, TVI, BCI and other problems.
- ❾ POWER CONNECTOR [DC13.8V]** (p. 15)
Connects to a 13.8 V DC through the supplied DC power cable.

Antenna connectors:

The placement of the antenna connector differs depending on the repeater.


ID-RP2010V:

- ❿ RX ANTENNA CONNECTOR [RX ANT]** (p. 16)
Connects to a 50 Ω receive antenna.
- ⓫ TX ANTENNA CONNECTOR [TX ANT]** (p. 16)
Connects to a 50 Ω transmit antenna.

ID-RP4010V:

- ❿ TX ANTENNA CONNECTOR [TX ANT]** (p. 16)
Connects to a 50 Ω transmit antenna.
- ⓫ RX ANTENNA CONNECTOR [RX ANT]** (p. 16)
Connects to a 50 Ω receive antenna.

ID-RP1200VD:

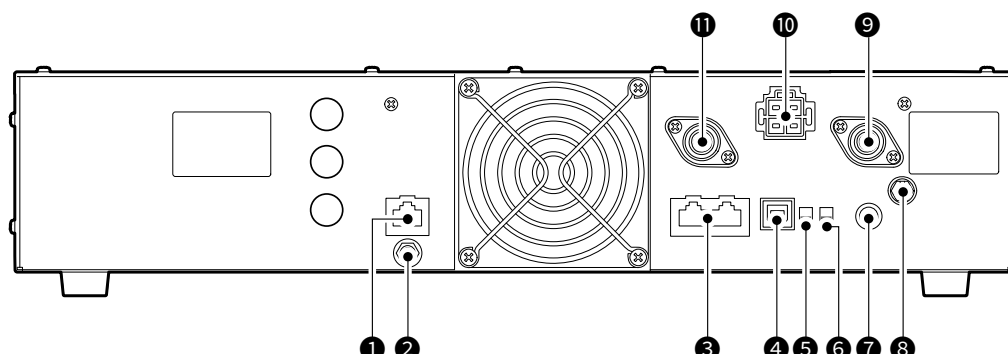**① CONT I/O PORT [CONT I/O]** (p. 15)

Connects to the ID-RP2C with the supplied control cable for serial data communications.

① Not usable in DD mode.

② REFERENCE SIGNAL INPUT CONNECTOR [REF IN 10 MHz] (p. 16)

Inputs a 10 MHz reference signal for adjusting the reference signal.

③ RPT1/RPT2 PORT [RPT1]/[RPT2] (p. 16)

Connects to other repeaters with the supplied control cable for data communications, when additional repeater modules are installed in the local repeater.

④ USB PORT [USB] (p. 16)

Connects to a PC through a USB cable (A - B type) to program the repeater.

⑤ CONT I/O RPT SWITCH [CONT I/O RPT] (p. 8)

Select to use the [RPT1]/[RPT2] or [CONT I/O]. When using the ID-RP2C as gateway or assist controller, set to [CONT I/O].

① Turn the repeater OFF and then restart it to apply the change.

⑥ DV/DD SELECT SWITCH [DV/DD] (p. 7)

Select an operating mode from DD mode or DV mode.

⑦ SERVICE JACK [SERVICE] (p. 16)

Outputs the receive audio and DTMF tones.

⑧ GROUND TERMINAL [GND]

Connects to a ground to prevent electrical shocks, TVI, BCI and other problems.

⑨ TX ANTENNA CONNECTOR [TX ANT] (p. 16)

Connects to a 50 Ω transmit antenna.

① In DD mode, the connector is used as a both TX and RX antenna connector.

⑩ POWER CONNECTOR [DC13.8V] (p. 15)

Connects to a 13.8 V DC through the supplied DC power cable.

⑪ RX ANTENNA CONNECTOR [RX ANT] (p. 16)

Connects to a 50 Ω receive antenna.

① In DD mode, the connector is not used.

■ Select a location

Select a location for the repeater that enables adequate air circulation, free from extreme heat, cold or vibration, and other electromagnetic sources.


Never place the repeater in areas such as:

- Temperatures below -10°C ($+14^{\circ}\text{F}$) or above $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$).
- An unstable place that slopes or vibrates.
- In direct sunlight.
- High humidity and temperature environments.
- Dusty environments.
- Noisy environments.

■ Connecting a power source

Connect a third-party DC 13.8 V external power source. The power source that meets the following conditions is preferable.

- DC 13.8 V (Capacity: At least 9 Amps)
 - A power source with an over current protective line, and low voltage fluctuation or ripple.
- ① Confirm that the repeater is turned OFF before connecting the DC power cable.

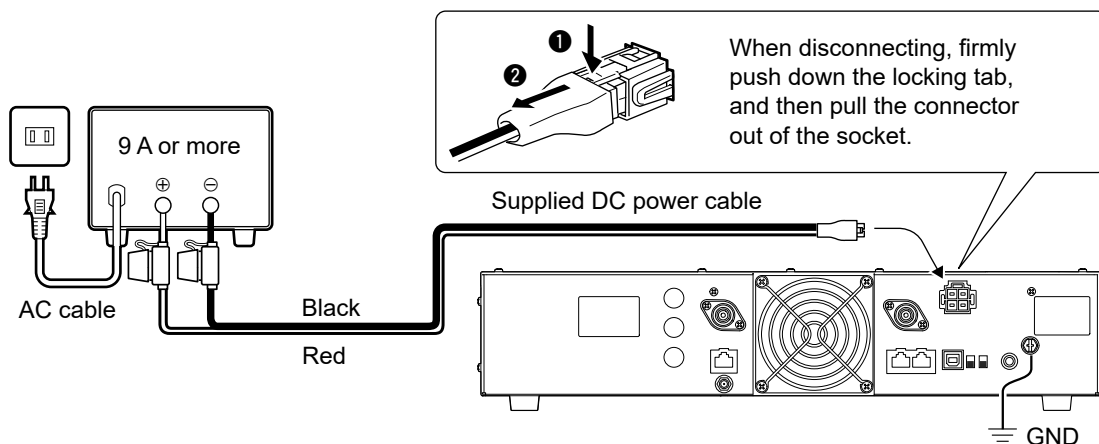


■ Grounding

Ground the repeater through the [GND] terminal on the rear panel to prevent electrical shock, television interference (TVI), broadcast interference (BCI), and other problems.

For best results, connect a heavy gauge wire or strap to a long earth-sunk copper rod.

Make the distance between the [GND] terminal and ground as short as possible.

- ① We recommend attaching an coaxial arrester (User supplied) to the antenna to prevent lightning surges.

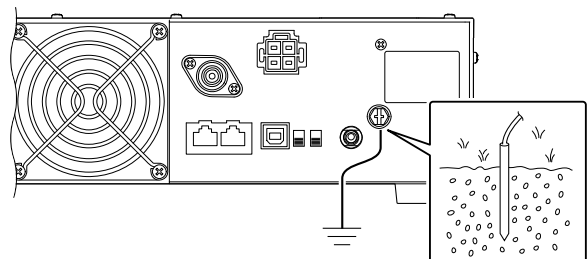


⚠ WARNING! NEVER connect the [GND] terminal to a gas or electric pipe, since the connection could cause an explosion or electric shock.

■ Installing in a system rack

This repeater is designed to be installed in a standard EIA 19-inch rack.

NOTE:

- Be sure to secure the repeater's front panel to the system rack.
- Use the rack that can hold the weight of approximately 6 kg (13.2 lbs). When installing multiple repeaters, make sure the rack can withstand the total weight, including the connected cables.


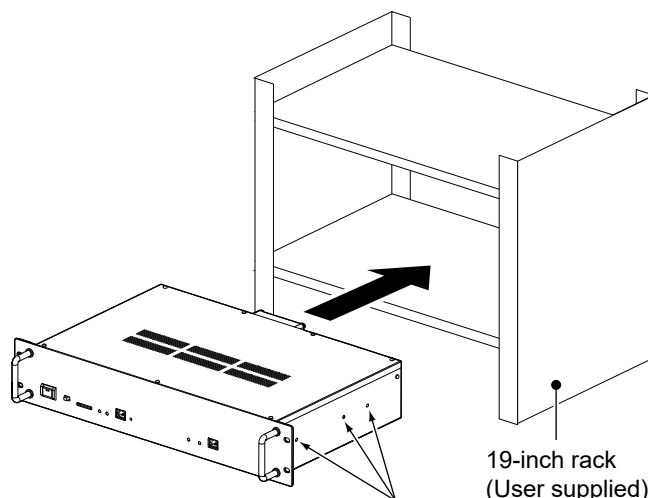


① You can also attach to the slide rail using M4 screw holes.

■ Attaching the rubber feet

For desktop installations, attach the supplied rubber feet onto the bottom of the repeater, as shown below.

⚠ WARNING! DO NOT stack multiple repeaters on the desk. This could increase the repeater temperature and damage repeaters or cause fire or burns.

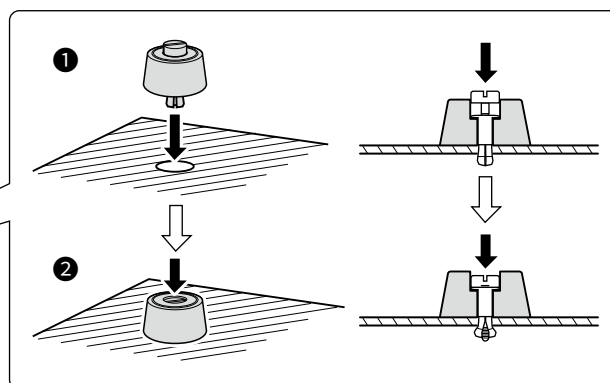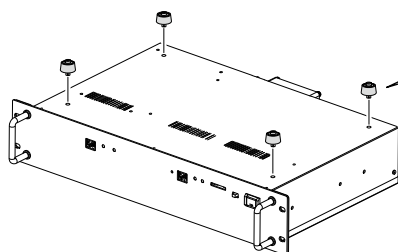

■ Connecting the Utility software


Sets the transmit and receive frequency, repeater call sign and other function settings using the Utility for ID-RP3. Ask your dealer for details of the utility.

Connect the repeater and the Windows PC that the Utility for ID-RP3 is installed in, as shown below.

To use the USB cable between the repeater and a PC, you must first install a USB driver.

Download the latest USB driver and installation guide on the Icom website.


<https://www.icomjapan.com/support/>

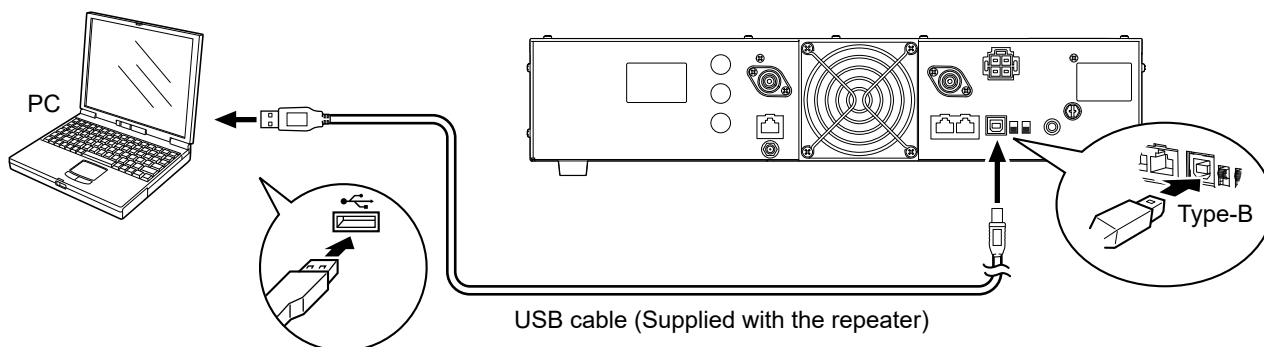

■ Using the [DV/DD] switch (For only the ID-RP1200VD)

The usage of the ID-RP1200VD's antenna connector differs depending on the operation mode, as shown below.

① The mode selection item of the Utility for ID-RP3 is disabled while operating in DD mode.

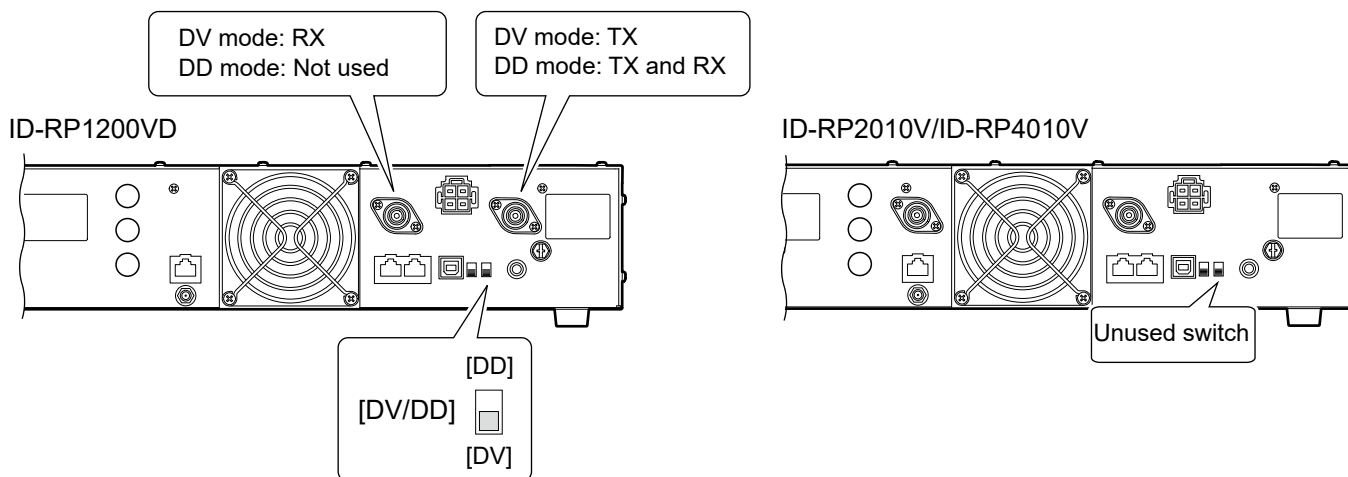


■ Connecting multiple repeaters

Connect multiple repeaters using the supplied LAN cable. This allows sharing one gateway server by multiple repeaters for different bands.

- ① Up to 4 repeaters are connectable.
- ① Only one DD mode ID-RP1200VD can be connected.
- ① Confirm that the ID of each connected repeater is not duplicated. The repeater ID is changeable using the Utility for ID-RP3 (Tool > Rewrite ID).
- ① If you use a LAN cable other than the one supplied, use one with a length of 3 meter or less.
- ① You cannot use with the ID-RP2C when the [CONT I/O RPT] is set to [RPT].

Connection example:

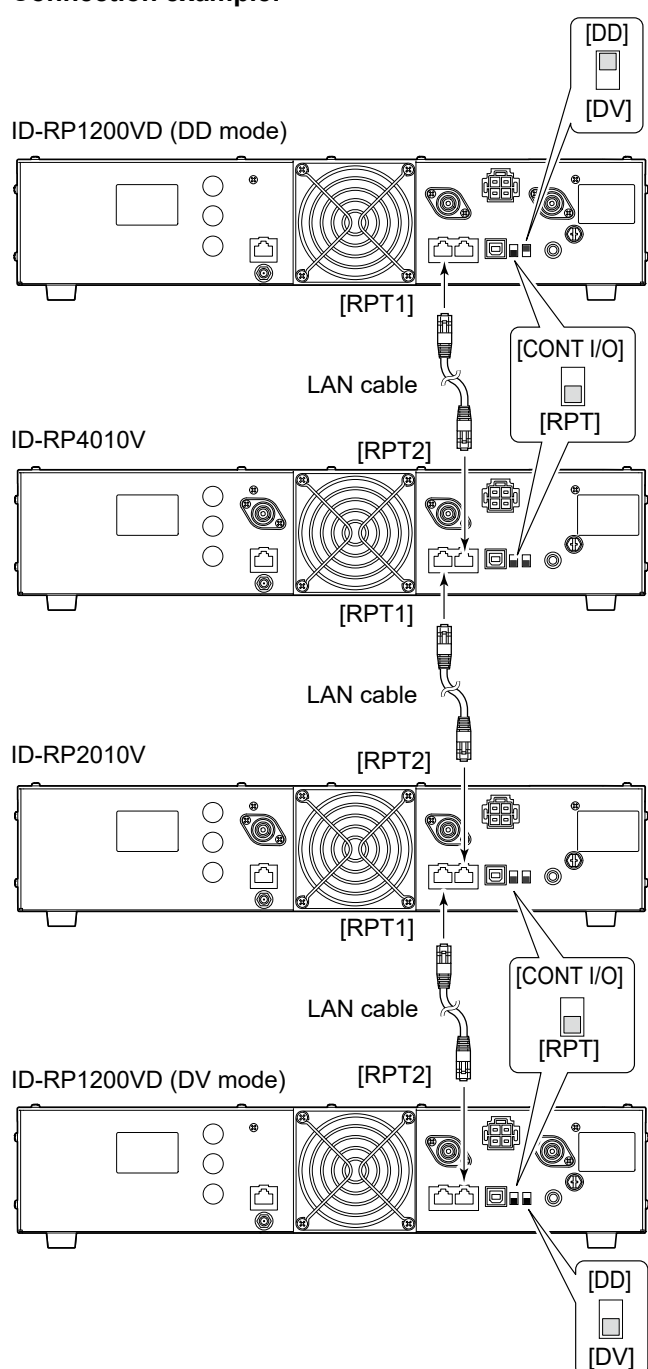

NOTE: The repeater's default ID is as follows:

ID-RP2010V: 1, ID-RP4010V: 2, ID-RP1200VD: 3

If two ID-RP1200VD repeaters, one for DV mode and the other for DD mode are connected, they must not have the same ID. Change the DD repeater's ID to 4.


■ Connecting to the ID-RP2C

Connect the ID-RP2C Repeater controller and assist repeater as a gateway for the repeater.

- ① If you use a LAN cable other than the one supplied, use one with a length of 3 meter or less.
- ① A Gateway server is usable with connecting the ID-RP2C.
- ① You cannot connect multiple repeaters when the [CONT I/O RPT] is set to [CONT I/O].
- ① The ID-RP1200VD in DD mode is not usable.

Connection example:

ID-RP2010V or ID-RP4010V

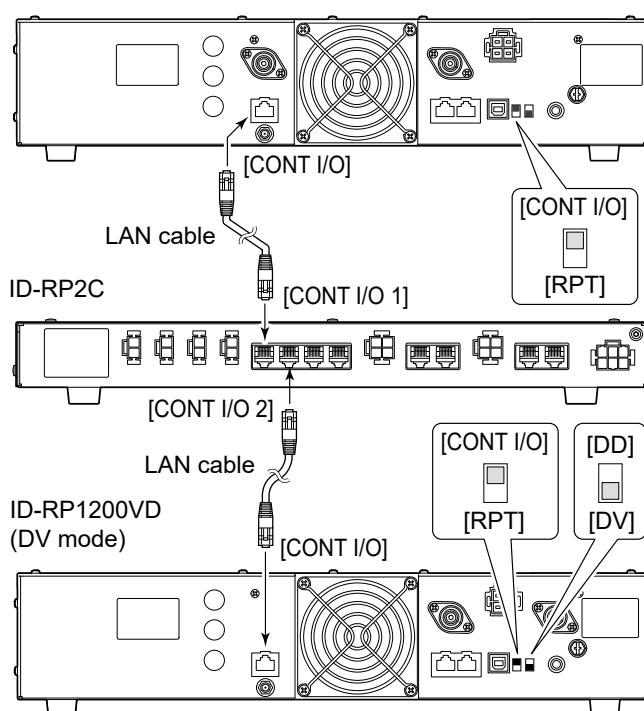


■ Operating as a Gateway

◇ Using a Gateway server

Connect the repeater, Gateway server, and router as shown below. Ask your dealer for details of settings required for the Gateway server and router.

- ① Only one repeater can be used as a Gateway if multiple repeaters are connected.
- ① If multiple repeaters are connected, and the ID-RP1200VD operating in DD mode is included, connect the gateway server to the ID-RP1200VD. The system does not work if it is connected to other repeaters.
- ① When using a Gateway server that is connected to the existing ID-RP2C, you can also simply connect the repeater to the ID-RP2C instead of connecting as shown below.

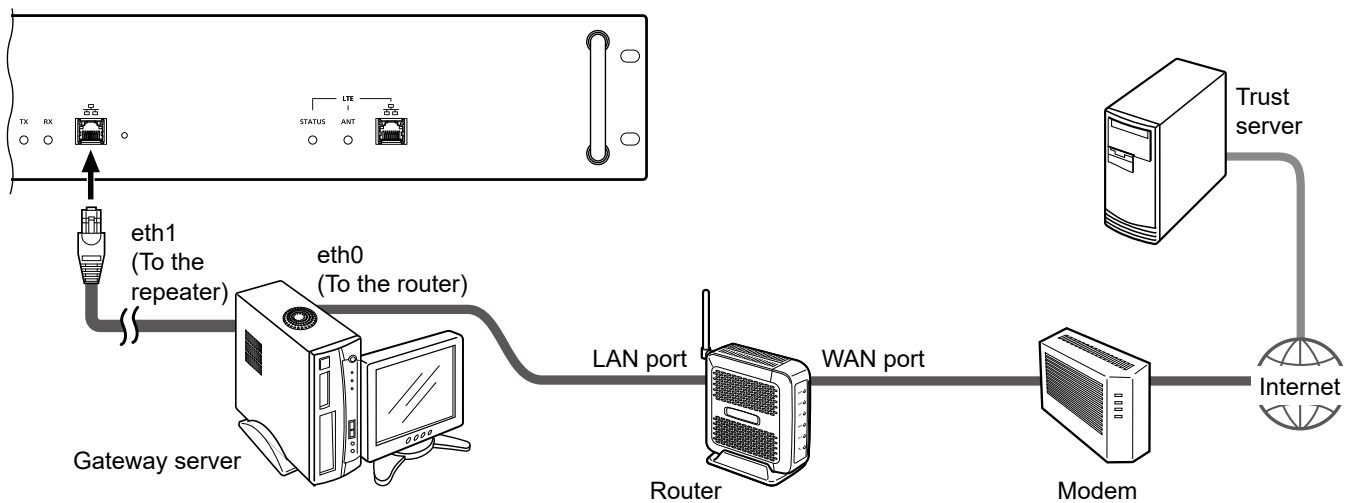

◇ System requirements

PC:

- Ethernet ports

Network:

- 750 kbps or faster network speed

Router:

- A router that has port forwarding and can set a class A subnet mask to a LAN port.

■ Using an SD card

You can use an SD card of up to 2 GB, or an SDHC of up to 32 GB. Icom has checked the compatibility with the following SD and SDHC cards.

Manufacturer	Type	Storage
SanDisk®	SD	2 GB
	SDHC	4/8/16/32 GB

- ① The above list does not guarantee the card's performance.
- ① Throughout the rest of this document, the SD cards and SDHC cards are simply called the SD card or the card.

The repeater uses the data saved in following formats:

- The repeater's setting data (icf).
- The voice data used for reading out callsign (wav).
- Firmware data for update (dat).

An SD card is required when:

- Updating the repeater's firmware.
- Importing or exporting the repeater's setting data*.
- Importing the voice data used for reading out callsign*.

*The Utility for ID-RP3 is required. Ask your dealer for details of the utility.


NOTE:

- Before using the SD card, thoroughly read the instructions that comes with the card.
- If any of the following occur, the SD card's data may be corrupted or deleted.
 - Drop, impact, or vibrate the SD card.
 - Removing from the repeater while it is turned ON.
 - Removing from the repeater while it is still accessing the SD card.
- Do not touch the contacts of the SD card.
- The repeater may take a longer time to recognize the SD card with larger storage.
- The SD card has a certain lifetime. Data reading or writing may not be possible after using it for a long years.
- Icom will not be responsible for any damage caused by data corruption on an SD card.

◇ Inserting

Insert the SD card as shown below.

- ① Insert the SD card into the slot until it locks in place, and makes a 'click' sound.
- ① Be sure to check the card orientation before inserting.

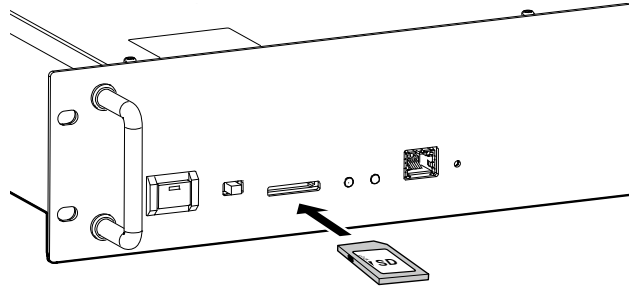


NOTE:

- Format the SD card on your PC before inserting.
- Before formatting, backup its data onto your PC. Formatting a card erases all its data.
- When inserting, folders will be created on the SD card.

IMPORTANT: Even if you have formatted an SD card, some data may remain in the card. When you dispose the card, be sure to physically destroy it to avoid unauthorized access to any data that remains.


◇ Removing

Push in the SD card until a 'click' sounds to unlock (①), and then remove it from the slot (②).

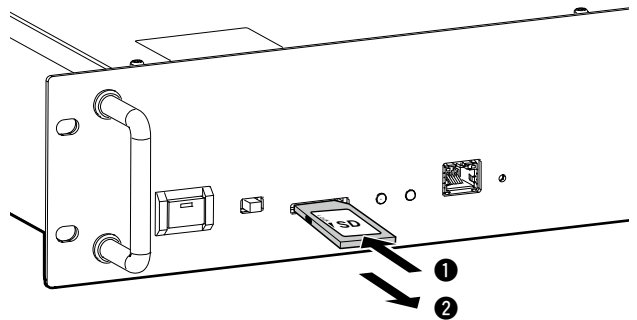

■ About the SD card's folder contents

When inserting an SD card, folders will be created as shown below. You can browse or edit the contents on your PC.

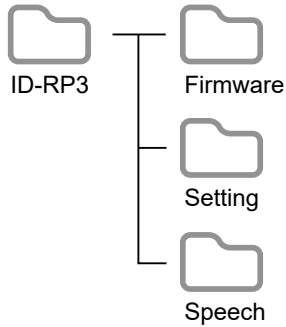

Firmware folder:

Saves the “dat” format firmware data when updating the repeater’s firmware.

- ① Only one firmware data file must be saved in the folder.

Setting folder:

Saves the repeater’s setting data in the “icf” format.

- ① The repeater’s setting data will be saved as “SetYYYYMMDD_XX.icf.”
- ① When writing the programmed data to the repeater, save it with the file name “Setting.icf”.

Speech folder:

Saves the voice data used for reading out callsign in the “wav” format.

- ① The data’s filename must be “Speech.wav.”
- ① The voice data cannot be backed up from the repeater to an SD card.

■ Cleaning



DO NOT use harsh solvents such as benzine or alcohol when cleaning, because they will damage the repeater surfaces.



If the repeater becomes dusty or dirty, wipe it clean with a dry, soft cloth.

■ Replacing fuses

If a fuse blows, or the repeater stops functioning, find and repair the cause of the problem. Then replace the damaged fuse with a new, adequately rated fuse.

① Spare fuses are supplied with the repeater.

The fuses are installed in the DC power cable and in the inside circuitry, to protect the repeater.


- DC power cable fuses: ATC 25 A (ID-RP2010V)
ATC 10 A (ID-RP4010V/
ID-RP1200VD)
- Circuitry fuse: APS 5 A

⚠ WARNING!

- **NEVER** use fuses that are not specified. It may damage the repeater or cause fire.
- Disconnect the DC power cable from the repeater before replacing the fuse. Otherwise, it may damage the repeater or cause an electrical shock.

◇ Replacing DC power cable fuses


Replace fuses as shown below.

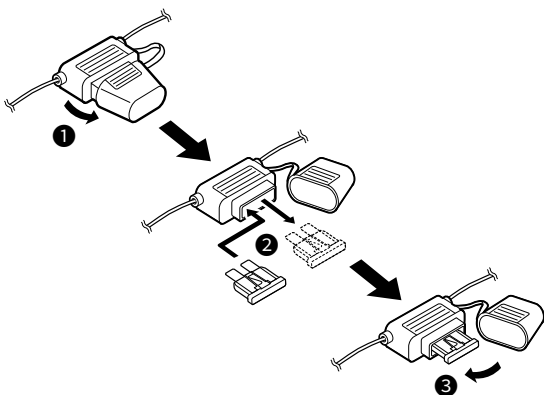

◇ Replacing the circuitry fuse


Open the repeater main unit, and then replace the fuse as shown below.

1. Remove the screws, and then remove the top cover.

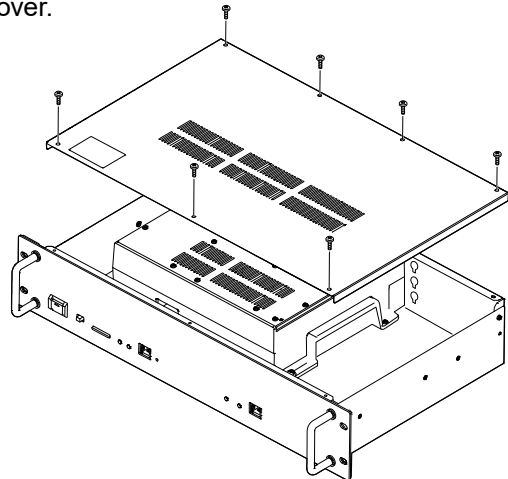


2. Remove the shield screws and springs*, and then remove the shield cover.

*Some repeater may include springs. Confirm they are in the same position when reattaching.

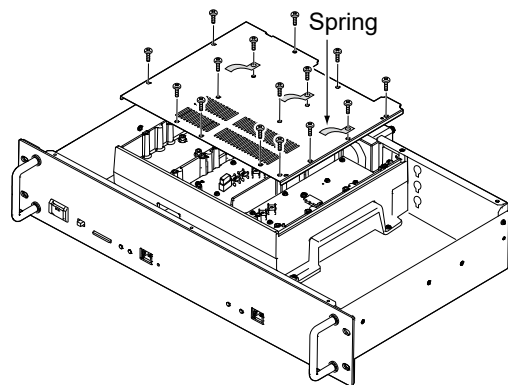

3. Replace the circuitry fuse as shown below.

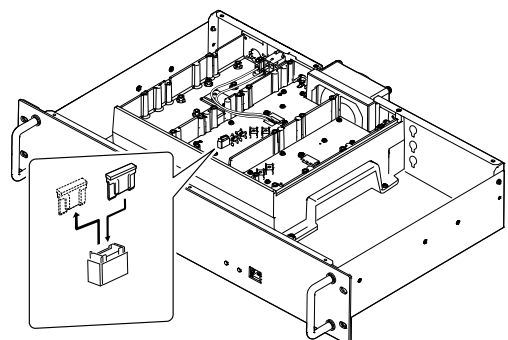

CAUTION: Remove the fuse using needle-nose pliers to protect your fingers and the fuse holders.

4. Reattach the removed parts.


About the firmware

The repeater's firmware may be updated to add or improve functions. Ask your dealer for details of updating the firmware.

- ① Update the firmware using a formatted SD card. Extract the downloaded firmware and copy it to the "Firmware" folder on the SD card (p. 11).

Detaching the rack handle

You can detach the rack handle, depending on the repeater's installation environment. Use the supplied Allen wrench to detach, as shown below.

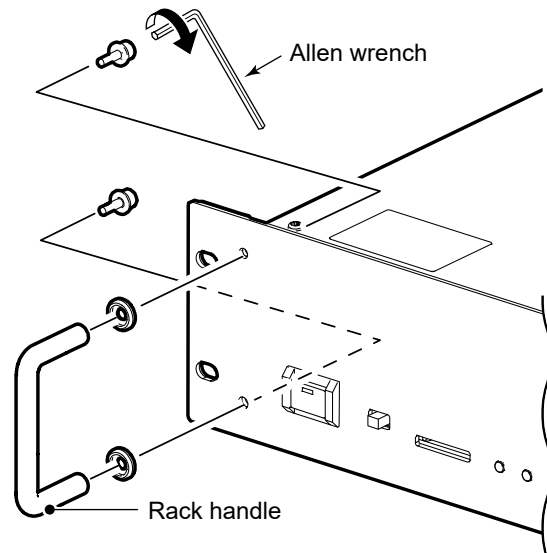

Troubleshooting

If the repeater seems to be not correctly operating, check the following points before sending it to an authorized Icom service center.

PROBLEM	POSSIBLE CAUSE	SOLUTION	REFERENCE
The repeater does not turn ON.	<ul style="list-style-type: none"> The connector or DC power cable has a poor contact. The external power unit is turned OFF. Blown fuse. 	<ul style="list-style-type: none"> Check the connector pins and then reconnect the DC power cable. Confirm the external power unit is turned ON. Fix the problem, then replace the fuse. 	<p>p. 5</p> <p>-</p> <p>p. 12</p>
Cannot turn OFF the repeater.	<ul style="list-style-type: none"> You are not holding down [POWER]. 	<ul style="list-style-type: none"> Hold down [POWER] until its green indicator is turned OFF. 	p. 2
Both [TX] and [RX] indicator blink at same time.	<ul style="list-style-type: none"> The repeater settings are reset to default. 	<ul style="list-style-type: none"> Set operation frequency and tone. 	Ask dealer for details.
The repeater does not transmit output power, or transmits low output power.	<ul style="list-style-type: none"> Antenna or coaxial cable has problems. 	<ul style="list-style-type: none"> Check, and if necessary, replace the coaxial cable or the antenna connector. 	-
Sensitivity is low and only strong signals are heard.	<ul style="list-style-type: none"> Antenna or coaxial cable has problems. 	<ul style="list-style-type: none"> Check, and if necessary, replace the coaxial cable or the antenna connector. 	-
There was a problem with the operation.	<ul style="list-style-type: none"> Caused by external factors such as static electricity. 	<ul style="list-style-type: none"> Turn OFF the repeater, remove and reattach the external power unit, and then turn ON the repeater. 	-
The repeater does not repeat the received signal.	<ul style="list-style-type: none"> Incorrect settings. 	<ul style="list-style-type: none"> Check the mode setting (FM or DV). Check the operation frequency setting and tone setting. Check the callsign setting and IP address setting. 	Ask dealer for details.
Cannot connect to other repeater sites.	<ul style="list-style-type: none"> Cannot connect to the Gateway server from the WAN port. 	<ul style="list-style-type: none"> Confirm accessing from a WAN port is enabled on your router. 	-
The repeater does not operate as a Gateway	<ul style="list-style-type: none"> The ID-RP2C is connected. 	<ul style="list-style-type: none"> Connect a Gateway server to the ID-RP2C. 	p. 1

■ Specifications

- ① Measurements made without an antenna.
 ① All stated specifications are subject to change without notice or obligation.

◇ General

• Operating frequency range:	ID-RP2010V (USA) ID-RP2010V (EUR) ID-RP4010V (USA) ID-RP4010V (EUR) ID-RP1200VD	144 ~ 148 MHz 144 ~ 146 MHz 440 ~ 450 MHz 430 ~ 440 MHz 1240 ~ 1300 MHz
• Type of emission:	ID-RP2010V/ID-RP4010V ID-RP1200VD	F2A (ID), F3E (FM), F7W (DV) F1D (DD), F2A (ID), F3E (FM), F7W (DV)
• Antenna impedance:		50 Ω nominal
• Antenna connector type:		N-Type
• Operating temperature range:		−10°C ~ +50°C, 14°F ~ +122°F
• Frequency stability:		±0.5 ppm
• Frequency resolution:		1 Hz
• Transfer rate:		4.8 kbps (DV mode) 128 kbps (DD mode (ID-RP1200VD))
• Current drain:	ID-RP2010V ID-RP4010V ID-RP1200VD	9.0 A or less (TX High), 4.0 A or less (TX Low), 1.8 A or less (Standby) 7.0 A or less (TX High), 3.0 A or less (TX Low), 1.8 A or less (Standby) 6.0 A or less (TX High), 4.0 A or less (TX Low), 1.8 A or less (Standby)
• Power supply voltage:		13.8 V DC ± 15% (negative ground)
• Dimensions:		482 (W) × 88 (H) × 275 (D) mm, 19 (W) × 3.5 (H) × 10.8 (D) inches (Projections not included)
• Weight (Approximate):		6 kg, 13.2 lbs

◇ Transmitter

• Output power:	ID-RP2010V/ID-RP4010V ID-RP1200VD	25 W (High), 2.5 W (Low) 10 W (High), 1 W (Low)
• Modulation system:	FM DV DD (ID-RP1200VD)	Digital reactance modulation Digital GMSK modulation Digital Quadrature modulation
• Maximum frequency deviation:		± 2.5 kHz (FM narrow), ± 5.0 kHz (FM wide)
• Occupied bandwidth:		6 kHz or less (DV), 150 kHz or less (DD)
• Spurious emissions:	Harmonics	−63 dB or less (ID-RP2010V) −61.8 dB or less (ID-RP4010V) −53 dB or less (ID-RP1200VD)
	Out-of-band emission	−60 dB or less (ID-RP2010V/ID-RP4010V) −50 dB or less (ID-RP1200VD)

■ Specifications (Continued)

◇ Receiver


• Receive system:	ID-RP2010V/ID-RP4010V ID-RP1200VD	RF direct sampling Superheterodyne
• Sensitivity:	FM DV DD (ID-RP1200VD)	−15 dBμV (0.18 μV) or less (At 12 dB SINAD) −13 dBμV (0.22 μV) or less (At 1% BER (PN9)) 4 dBμV (1.58 μV) or less (At 1% BER (PN9))
• Selectivity:	FM (BW: 15 kHz) DV	More than 12.0 kHz/−6 dB, 20 kHz or less/−60 dB −50 dB or less (Channel spacing=12.5 kHz)
• Selectivity (ID-RP1200VD):	FM (BW: 15 kHz) FM (BW: 7 kHz) DV DD	20 kHz or less/−50 dB 10 kHz or less/−50 dB −40 dB or less (Channel spacing=12.5 kHz) −40 dB or less (Channel spacing=300 kHz)
• Intermodulation:	ID-RP2010V/ID-RP4010V ID-RP1200VD	−60 dB or less −50 dB or less
• Receive spurious:		2 nW (−57 dBm) or less
• Spurious & image rejection:	ID-RP2010V/ID-RP4010V ID-RP1200VD	55 dB or more 50 dB or more
• Audio output power:		2.0 W or more (1 kHz, 10% distortion into an 8 Ω load)
• AF output impedance:		8 Ω

■ Connectors

◇ [DC 13.8 V]

Accepts the regulated DC power of 13.8 V DC ±15% through the supplied DC power cable.

⚠ WARNING! NEVER reverse the DC power cable polarity.

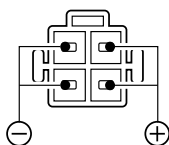

◇ [LAN 1]

Connects to a Gateway server when operating in the Gateway repeater mode.


About the LED indication:

① LINK/ACT

- Lights when a cable is connected.
- Does not light when a cable is not connected.
- Blinks while communicating.

② SPEED


- Lights while communicating in 100BASE-TX.
- Does not light while communicating.
- Blinks while communicating in 10BASE-T, or not connected.



◇ [LAN 2]

Connects to a Gateway server when operating in the LTE mode.

① An optional LTE unit is required.



About the LED indication:

① LINK/ACT

- Lights when a cable is connected.
- Does not light when a cable is not connected.
- Blinks while communicating

② SPEED

- Lights while communicating in 100BASE-TX.
- Does not light while communicating.
- Blinks while communicating in 10BASE-T, or not connected.

◇ [CONT I/O]

Connects to the LAN port of the ID-RP2C using a supplied control cable, when the repeater system is operating as a gateway or assist repeater with the ID-RP2C.


① Set [CONT I/O RPT] on the rear panel to "CONT I/O," when using this port.



◇ [RPT1]/[RPT2]

Connects to other repeaters using the supplied control cable for data communications, when multiple repeaters are installed in the repeater system.

① Set [CONT I/O RPT] on the rear panel to "RPT," when using this port.



NOTE:

- The RPT1 port of the repeater to connect the other band repeater must be connected to the RPT2 port of the other repeater unit.
- The ports enable the repeaters to be "daisy chained" together, and form a network that allows other data to pass among them.

◇ [REF IN 10MHz]

Inputs a 10 MHz signal as a reference frequency signal.

- Input frequency: 10 MHz
- Impedance: 50 Ω (unbalanced)
- Input level: -10 dBm (approximately)

① Adjust the internal reference frequency using the utility software.



SMA connector

◇ [USB]

Connects to the PC with a supplied USB cable to set the details of the repeater, such as the callsign, frequencies, IP address, and any other functions using the utility software.


- Connector type: USB type B (1.1/2.0)



◇ [EXT-SP (SERVICE)]

Connects to a 3.5 mm external speaker. Outputs the audio and DTMF tone data.

GND AF/DTMF



- Output impedance: 4 ~ 8 Ω
- Output level: More than 2 W at 10% distortion into an 8 Ω load.

◇ [TX ANT]

Connect a TX antenna (Type N).

- Input impedance: 50 Ω (unbalanced)

① In DD mode of the ID-RP1200VD, the connector is used as a both TX and RX antenna connector.



◇ [RX ANT]

Connect a RX antenna (Type N).

- Output impedance: 50 Ω (unbalanced)

① In DD mode of the ID-RP1200VD, the connector is not used.



■ Options

• UX-262 LTE UNIT

The unit required for operations on an LTE network.

■ About the licences

License for CMSIS-RTOS RTX Implementation

Copyright (c) 1999-2009 KEIL, 2009-2013 ARM Germany GmbH All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of ARM nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL COPYRIGHT HOLDERS AND CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

